




Supplemental Installation Instructions For Single Flange Mount on 5500 Series Vertical & Horizontal Fire Dampers Static & Dynamic (D) Systems

Rated per UL555, UL File R6189

These Instructions Typify Both Horizontal And Vertical Installations Except As Noted,
And Apply Also To Masonry And Drywall Construction (see also Sheet GENII-2)

Maximum Size 96" x 48"

INSTRUCTIONS FOR INSTALLATIONS WITH & WITHOUT SLEEVES

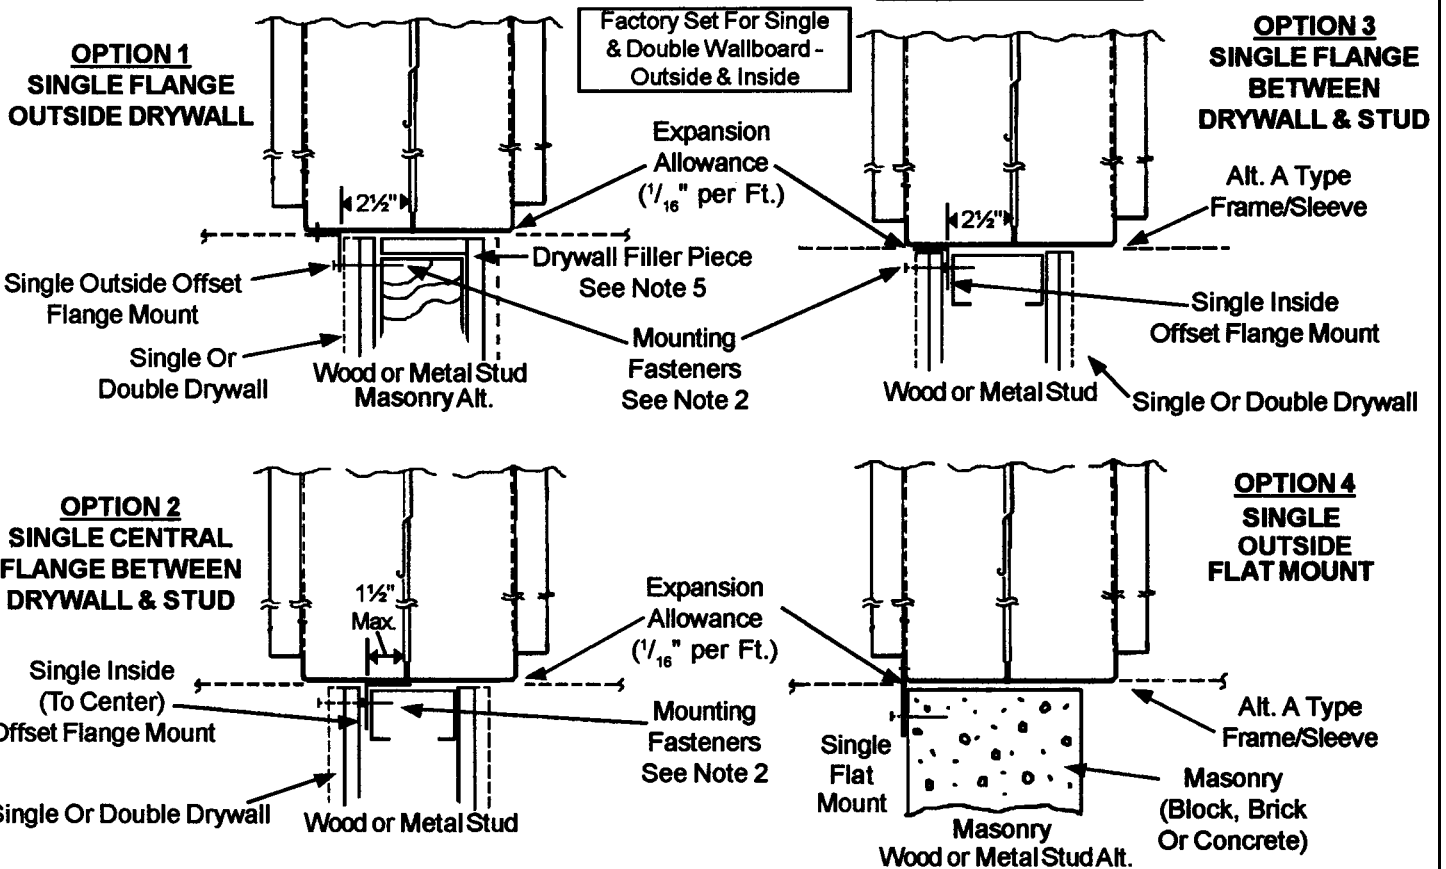

NOTES:

1. When installing in drywall installations, damper mount flange/flat must be positioned as shown for both wood and metal studs per illustrations on this sheet. General drywall mounting instructions are available on sheet Gen II-2. Sleeve/Damper to wall expansion clearance is required externally. No additional sleeve is required when using dampers available for sleeveless installation. See specific damper installation instructions for details.
2. Flange is fastened as shown. Fasteners must be #10 screws and appropriate for wall construction (stud/drywall or masonry).
3. In sleeveless installations, a UL approved breakaway connection must be utilized. In sleeved installations, an appropriate gauge sleeve must be used - see appropriate damper installation instructions for specific details.
4. Mounting flange/flat must always be on top side of partition in horizontal installations.

REPRESENTED BY

MANUFACTURED BY
PERFECT AIR CONTROL, INC.
1310 N. HERCULES AVE. CLEARWATER, FL 33765
CUSTOMER SERVICE (800) 437-6653 * ORDER ENTRY FAX (727) 431-6074
www.prefco-hvac.com